Installation instructions

2310101

2310101C

Operating conditions

Recommended flow temperature ≤ 65°C

Maximum flow temperature

momentary ≤ 90°C

Minimum flow pressure 1 bar

Maximum flow pressure 5 bar

Recommended operating pressure 3 bar

Test pressure 16 bar

Notes

Before installing the valves, clean the water pipe thoroughly to avoid dirt and deposits





