
TWO HANDLE WASHERLESS KITCHEN FAUCET


For easy installation of your you will need:

 
To READ ALL the instructions completely before beginning.

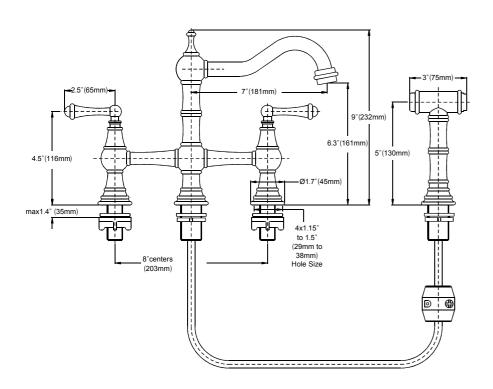


OPERATION

- Lever style handles
- Maximum handle(s) rotation angle is 90° to full on
- Rotate hot side counterclockwise to open (clockwise to close)
- Rotate cold side clockwise to open (counterclockwise to close)

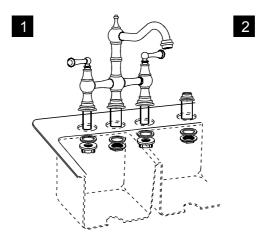





Option: If sink is uneven, use silicone under the escutcheon . Secure faucet to sink using locknuts provided.

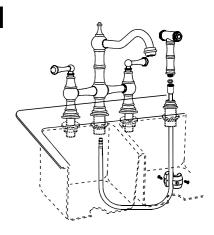

Mount spray support in far right hole in sink.

Insert spray hose down through the support and up though center hole of sink.

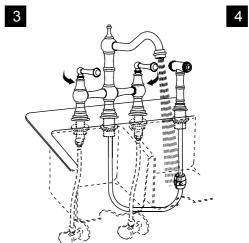

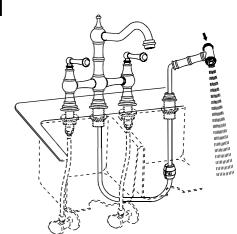

CONNECT TO WATER SUPPLIES (not included). Do not overtighten.

FLUSH SYSTEM/CHECK FOR LEAKS. Remove and clean aerator, turn faucet handles all the way on. Turn on hot and cold water supplies and flush water lines for one minute.

Important: This flushes away any debris that couldcause damage to internal parts. Check all connections at arrows for leaks. Replace aerator